



FLAWLESS VOLUME HOT AIRSTYLER 2764U

SAFETY CAUTIONS

- This appliance should only be used as described within this instruction booklet. Please retain for reference.

IMPORTANT CHILD SAFETY

WARNING! Polythene bags over a product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

WARNING! THIS APPLIANCE GETS HOT!

- **ALWAYS** keep out of reach of children (during and after use and whilst cooling).
- This appliance should not be used, cleaned or maintained by children.
- Always take extra care if used on children or near children.
- Do not use on very young children.

IMPORTANT SAFETY



- **UK Only:** Do not use this appliance in the bathroom.
- **Outside the UK:** If using the appliance in a bathroom, unplug after use as the proximity of water can be dangerous even if the appliance is switched off. For additional protection the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.
- **WARNING!** Do not use this appliance near water contained in basins, bathtubs or other vessels.
- Do not immerse the appliance into water or other liquids.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged, or if the appliance has been dropped. In the event of damage, discontinue use immediately. Contact the Conair Customer Care Line (refer to 'UK After Sales Service' section for further information).
- Do not use the appliance if the lead is damaged. In the event of damage, discontinue use immediately. If the lead is damaged it must be replaced by the manufacturer. Return the appliance to the Customer Care Centre (refer to 'UK After Sales Service' section for further information). No repair must be attempted by the consumer.
- Do not leave the appliance unattended when switched on or plugged in.

- This appliance is equipped with a safety thermostat. In the event of overheating the appliance will either stop automatically or run hot and cold intermittently. Should this happen, simply slide the switch to the “0” setting, unplug and allow to cool for 10 minutes. Before use, ensure the rear filter is clear of hair and other debris. Plug in and switch on. If the appliance continues to overheat discontinue use immediately, switch off and unplug, and contact the Conair Customer Care Line (refer to ‘UK After Sales Service’ section for further information).
- Take care that the air vents do not become blocked when in use. Ensure the rear filter is clear of hair and other debris before use.
- Do not place the appliance on any heat sensitive surface whilst in operation.
- Take care to avoid the hot surface of the appliance coming into direct contact with the skin, in particular the ears, eyes, face and neck.
- This appliance should not be used by adults whose reduced physical, sensory or mental capabilities, or whose lack of experience and knowledge, might cause a hazard, unless they have been correctly instructed to understand the safe use and hazards involved and are adequately supervised.
- Allow the appliance to cool before storing away.
- After use do not coil the lead around the appliance as this may cause damage to the lead. Instead coil the lead loosely by the side of the appliance.

- This product complies fully with all appropriate EU and UK Legislation and the Standards relevant to this type and class of appliance. We are an ISO9001:2015 accredited company that continually evaluates our Quality Management System performance. If you have any queries regarding product safety and compliance, please contact our Customer Services Department. (See “U.K. After Sales Service” section for further information.)

INSTRUCTIONS FOR USE

- On longer, thicker hair types, it is suggested to rough dry your hair before using the airstyler to remove excess moisture pre-styling. Once the hair is 80% dry, you can start styling the hair.
- Use a hairbrush to remove any tangles from the hair and create your parting ready for styling. On longer, thicker hair types, you may want to divide the hair into sections to make styling easier.
- Turn the airstyler on by sliding the switch to the heat setting suitable for your hair type.
- Take a section of hair and place the brush head under the section of hair, as close to the roots as possible.
- Use the brush head to lift the hair at the roots as you style.
- Move the airstyler down along the hair section. As you reach the ends of the hair, rotate the airstyler slightly away from your face to curl the ends under.
- Repeat as necessary.
- For a lasting style, select the cool setting ‘*’ on warm hair whilst holding the brush head at the roots.
- After use, switch off by sliding the switch to the ‘0’ position and unplug the appliance.
- Allow to cool before storing away.

Heat Settings

There are 2 heat settings for general styling and a cool setting. Use the cool setting on warm hair to set the style and achieve lasting effect. Slide the 'on/off' switch to the first position for the cool setting '**', the second position for the low heat 'I' and the third position to select high heat 'II'.

If you have delicate, fine or coloured hair, use the lower heat setting. For thicker hair, use the higher heat setting.

CARE & MAINTENANCE

To help keep your appliance in the best possible condition follow the steps below:

- Ensure the appliance is switched off, unplugged and cool. To clean the outside of the appliance, wipe with a damp cloth. Make sure that no water enters the appliance and it is completely dry before use.
- Do not wrap the lead around the appliance, instead coil the lead loosely by the side of the appliance.
- Do not use the appliance at a stretch from the power point.
- Always unplug after use.

Cleaning the Rear Filter

- Unplug the appliance and let it cool completely before cleaning it.
- Holding the handle of the appliance firmly twist the rear filter anti-clockwise until the raised rib aligns with the "open" arrow on the appliance housing.
- Using a soft brush, clean any hair and other debris from the filter.
- Replace the rear filter by twisting back into position until the rear filter clicks into place.

For more information on this appliance visit www.babyliss.co.uk

UK GUARANTEE

This BaByliss appliance is guaranteed for consumer use for 3 years.

This guarantee covers defects under normal use from date of purchase and ceases to be valid in the event of alteration or repairs by unauthorised persons. If the appliance does not perform satisfactorily due to defects in materials or manufacture, it will be repaired or replaced through the Conair UK After Sales Service. The Conair Group Ltd reserve the right to amend terms and specifications without prior notice.

This guarantee in no way affects your statutory rights.

UK AFTER SALES SERVICE


For further advice on using the appliance or should you need to return your product, please contact the Conair Customer Care Line on 0370 5 133191 (09:00 to 17:00 Monday to Friday) or email your enquiry to ukinfo@conair.com.

The return address is:
Customer Care Centre
Conair Logistics
Unit 4, Revolution Park
Buckshaw Avenue
Buckshaw Village
Chorley
PR7 7DW

Please enclose your returns number, name and address details, together with a copy of proof of purchase and details of the fault.

SAFE DISPOSAL



The  symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be handed to an appropriate collection point for the recycling of Electrical and Electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.

