



360° Cordless Glass Jug Kettle



I/B Version
151014

220-240V~ 50Hz 3000W



Front cover page (first page)

Assembly page 1/8



Know Your Appliance



1. Push button operated flip-top lid
2. Stainless Steel spout with removable / washable limescale filter
3. Two stage flip-top lid button
4. Ergonomic handle
5. ON/OFF Switch
6. Removable 360 degree power base
7. Glass body with 1.7L water gauge
8. Interior Illumination

- Please note that the pattern / colour of your product may differ to as shown above.
- These user instructions apply regardless of pattern / colour.

✂


GB OPERATING INSTRUCTIONS

IMPORTANT SAFEGUARDS

Please read these instructions carefully before using the appliance, and always follow the safety and operating instructions.

Important: *This appliance can be used by children over 8 years old and people with reduced physical, sensory or mental capacities or with a lack of experience or knowledge if they have been given supervision or instructions concerning the safe use of the appliance and the risks involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 years and supervised. Never leave the appliance and its cord unsupervised and within reach of children less than 8 years old or irresponsible persons when it is plugged into the wall or when it is cooling down.*

- Check that your mains voltage corresponds to that stated on the appliance.
- Never leave the appliance unsupervised when in use.
- From time to time check the appliance for damages. Never use the appliance if cord or appliance shows any signs of damage. In that case, repairs should be made by a competent qualified electrician (*). Should the cord be damaged, it must be replaced by a competent qualified electrician (*) in order to avoid all danger.
- Only use the appliance for domestic purposes and in the way indicated in these instructions.
- Never immerse the appliance in water or any other liquid for any reason whatsoever. Never put it in the dishwasher.
- Never use the appliance near hot surfaces.
- Before cleaning or storing the appliance, always unplug the appliance from the power supply and let it cool down.
- Never use the appliance outside and always place it in a dry environment.
- Never use accessories that are not recommended by the producer. They could constitute a danger to the user and risk to damage the appliance.

- ✂
- ❑ Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way. Stand the appliance on a table or flat surface. Do not wind the cord around the appliance and do not bend it.
 - ❑ If your type of appliance has a separate base or a detachable cord, remove them from the water cooker when filling it. If your appliance has a fixed cord, unplug it before filling it.
 - ❑ Always fill between the minimum and maximum marks. The water must never be below the minimum mark or the heating element might be damaged. Do not overfill the jug kettle as boiling water might overflow.
 - ❑ When using the appliance, make sure the lid is closed correctly. Never raise the lid when the jug kettle is in use and when there are risks of hot water projection due to the bubbling.
 - ❑ Be careful not to get burned by the hot steam that evaporates when the water is boiling and especially when you open the lid.
 - ❑ Use only the base that is supplied with the jug kettle.
 - ❑ Should the symbol  be indicated on a certain surface, you need to be careful when handling the product. This symbol means "CAUTION, this surface may get very hot during use".

(*) Competent qualified electrician: after-sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs in order to avoid all danger. In case of need you should return the appliance to this electrician.

UK STYLE PLUG WIRING INSTRUCTIONS (IN THE UK ONLY)

This product must only be used from a 13 amp power socket. If a BS1363 approved 13 amp plug is used, it should be fitted with a 13 amp fuse conforming to BS1362 and be ASTA approved. The wires on the power cord are colour coded:

blue = neutral, brown = live, green or green & yellow = earth.

The blue wire must be connected to the terminal marked N or coloured in black.

The brown wire must be connected to the terminal marked L or coloured in red.

The green (& yellow) wire must be connected to the terminal marked E or coloured in green (& yellow).



Fax +32 2 359 95 50

Copies of the I/B. Please reproduce them without any changes except under special instruction from Team International BELGIUM. The pages must be reproduced and folded in order to obtain a booklet A5 (+/- 148.5 mm width x 210 mm height). When folding, make sure you keep the good numbering when you turn the pages of the I/B. Don't change the page numbering. Keep the language integrity.

FIELD OF APPLICATION/OF OPERATION

- Use the appliance for domestic purposes only and in the way indicated in these instructions.
- This appliance is intended to be used for domestic applications and similar applications such as:
 - Kitchen corners reserved for personnel in shops, offices and other professional environments.
 - Farms.
 - The use by clients of hotels, motels and other environments with a residential character.
 - Environments of the "bed and breakfast" type.

BEFORE THE FIRST OPERATION

For the perfect taste, operate the jug kettle with fresh water in order to clean any residue left from the manufacturing process. When the appliance has cooled down, repeat the process 3 times with fresh water, before rinsing.

OPERATION

- Always remove the jug from the power base before filling it or before any operation.
- Open the lid (pressing the lid release button) and fill the tank with fresh water, paying attention not to fill under the minimum mark and above the maximum mark on the water level indicator.
- Close the lid. Make sure it closes correctly.
- Put the jug onto the power base, plug into the wall socket and switch on by pressing down the switch situated underneath the handle.
- The jug kettle will switch off automatically when the water has boiled. However, you can stop the jug kettle anytime by putting the switch in off position.
- For instant reboiling, wait until the water has cooled down and switch on the appliance again.

SAFETY CUT-OUT

- This jug kettle is protected with an automatic safety device which switches off the appliance if it is accidentally switched on without water. Please bear in mind that only the thermostat is switched off in case of overheating, whereas the switch stays in ON position.
- In this case, switch off the appliance by putting the switch in OFF position and wait about 10 minutes for the element to cool. Then pour in sufficient cold water to cover the heating element. This will reset the safety device.
- The kettle may then be used as normal.

CLEANING AND MAINTENANCE

- Before attempting any cleaning operation, make sure the appliance is unplugged from the supply socket and fully cooled down.
- To clean the exterior surfaces, simply wipe over with a soft damp cloth and dry thoroughly.
- Never use abrasive products.
- On no account must the jug kettle or its power base be immersed in water.

FILTER

- Your appliance is provided with a filter. When you want to boil water, settle the filter first.
- To remove the particle/limescale filter, first ensure the appliance is cool. Then open the lid and carefully remove the filter by sliding the component upwards from its secure housing. Clean the filter under running water.
- The filter should be rinsed clean regularly.

Practical hints:

Should you notice that the appliance process is longer than normal, it is probably time to descale the appliance. Do not wait until the situation gets worse. The descaling frequency depends on the amount of lime in the water and therefore can be different from family to family. Therefore it is important to pay attention to this. A good maintenance of your appliance will prolong its lifespan. Guarantee claims will not be accepted for the replacement of a heating element full of scale.

DESCALING

The major cause of damage to kettles is limescale and your kettle will require regular maintenance to ensure that it continues to work properly. Limescale deposits continue to build up over time, blocking important parts of the kettle, and stopping it from working properly.

Types of problems caused by limescale build up:

Colour: Limescale will decolour your kettle.

Performance: Your kettle will take longer to boil (wasting electricity) and eventually will switch off before it has boiled.

Taste: Limescale can give the water a chalky taste and limescale flakes will give a gritty texture.


Other care tips:

To clean the outside of your kettle, use a soft, wet cloth. Always ensure appliance is cool before cleaning.

Avoid using abrasive cleaning agents.

PROTECTION OF THE ENVIRONMENT – DIRECTIVE 2012/19/EU

In order to preserve our environment and protect human health, the waste electrical and electronic equipment should be disposed of in accordance with specific rules with the

implication of both suppliers and users. For this reason, as indicated by the symbol  on the rating label or on the packaging, your appliance should not be disposed of as unsorted municipal waste. The user has the right to bring it to a municipal collection point performing waste recovery by means of reuse, recycling or use for other applications in accordance with the directive.

ErP Declaration – Regulation 1275/2008/EC

We, JD Williams Ltd., hereby confirm that our product meets the requirements of regulation 1275/2008/EC. Our product does not dispose of a standby mode as the electric kettle switches off completely immediately after the boiling is finished and as a consequence does not consume electricity!

The user manual is by simple request also available in electronic format from the after-sales service (see warranty card).



Fax +32 2 359 95 50

Copies of the I/B. Please reproduce them without any changes except under special instruction from Team International BELGIUM. The pages must be reproduced and folded in order to obtain a booklet A5 (+/- 148.5 mm width x 210 mm height). When folding, make sure you keep the good numbering when you turn the pages of the I/B. Don't change the page numbering. Keep the language integrity.



GUARANTEE

This product is guaranteed against manufacturing defects for a period of 1 year. This does not cover the product where the fault is due to misuse, abuse, use in contravention of the instructions, or where the product has been the subject of unauthorised modifications or alterations, or has been the subject of commercial use.

In the unlikely event of a problem with the product within the guarantee period please return it to the **place of purchase**. If the item is shown to have had an inherent defect present at the time of sale, the seller will provide you with a replacement. Your statutory rights remain unaffected.

Guarantor:

 
JD Williams Ltd.,

Griffin House, 40 Lever Street, Manchester, M60 6ES



Fax +32 2 359 95 50

Copies of the I/B. Please reproduce them without any changes except under special instruction from Team International BELGIUM. The pages must be reproduced and folded in order to obtain a booklet A5 (+/- 148.5 mm width x 210 mm height). When folding, make sure you keep the good numbering when you turn the pages of the I/B. Don't change the page numbering. Keep the language integrity.



Back cover page (last page)