



# *BaByliss* FOR *men*®



## Stubble Trim

**Model: 7848U**





# *BaByliss* for *men*<sup>®</sup>

## **Stubble Trim**

The BaByliss For Men Stubble Trim has been designed to give you every day stubble control. The trimmer has 30 ultra precise length settings, so you can maintain your preferred facial hair style at all times. Whether you're looking for a short 'shadow' look, a longer stubble look, or even a full beard, this product is full of great features to guarantee exceptional performance and to make creating your style as quick and easy as possible.

Choose between your 30 different length with the dial control to maintain your preferred length. The Stubble Trim is battery operated for convenient cordless use letting you define your style on the go.

## **FEATURES**

- Battery operated for everyday stubble control.
- Electro-chemically sharpened blades for exceptional precision and sharpness.
- Precise dial control adjusts the comb guide in 0.5 increments.
- 30 cutting lengths from 0.5-15mm for creating a short shadow or a longer stubble look.
- Requires 2 x AAA batteries (included).
- Cleaning brush.
- 3 year guarantee.





## **SAFETY CAUTIONS**

- This appliance should only be used as described within this instruction book. Please retain for reference.

## **IMPORTANT CHILD SAFETY**

**WARNING!** Polythene bags over the product or packaging may be dangerous. To avoid danger of suffocation, keep away from babies and children. These bags are not toys.

## **IMPORTANT SAFETY**



- Do not immerse the appliance in water or other liquids.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged or if the appliance has been dropped. In the event of damage contact the Conair Customer Care Line (refer to 'UK After Sales Service' section for further information).
- Only use the attachments supplied with this appliance.
- Do not leave the appliance unattended when switched on.
- Do not place the appliance on any surface whilst in operation.
- Special care is required when using the appliance close to the ears, eyes and face.
- This appliance should not be used by adults whose reduced physical, sensory or mental capabilities, or whose lack of experience and knowledge, might cause





a hazard, unless they have been correctly instructed to understand the safe use and hazards involved and are adequately supervised.

- Careful adult supervision is required when this appliance is used on or near children. Do not use on very young children.
- This appliance should not be used, cleaned or maintained by children. Keep out of reach of children.
- Always ensure that this appliance is kept out of the reach of children at all times, particularly during use and whilst cooling.
- Allow the appliance to cool before storing away.
- This product complies fully with all appropriate EU and UK Legislation and the Standards relevant to this type and class of appliance. We are an ISO9001:2015 accredited company that continually evaluates our Quality Management System performance. If you have any queries regarding product safety and compliance, please contact our Customer Services Department. (See “U.K. After Sales Service” section for further information.)
- The battery should be removed for safe disposal at the end of its life.
- When the battery has run down, it should be disposed of at a recycling centre to safeguard the environment. If the battery leaks, avoid touching it and dispose of it at a recycling centre.





## Inserting the Batteries

The trimmer requires 2 x AAA batteries. To insert or replace the batteries, remove the battery compartment cover on the reverse side. Insert the batteries as indicated on the inside of the battery compartment. Replace the casing until it clicks into place. If the appliance remains unused for a while or if the battery has run down, remove it from the appliance.

## INSTRUCTIONS FOR USE

Always inspect the Stubble Trim before use to ensure the cutting head is free from hair and debris and is running smoothly.

### Using the comb guide

**NOTE:** Always put the comb guide on BEFORE turning the trimmer on, and turn the trimmer off before removing it.



To remove or replace the comb guide, first set the comb guide dial to the triangle mark (on the reverse of the Stubble Trim). Pressing the two side buttons, lift the comb guide off the Stubble Trim. To put it back on please line up the two inward facing side guides and push back down.





## Swivel Short Beard Special Guide

- The comb guide features a moveable part: the short beard special guide. It is specially designed for very short beards (positions 0.5 to 6) and ensures an even more accurate cut.
- To ensure the short beard guide is in position, push the two side buttons (fig 1) with your thumb and index finger and make it swivel through a 180 ° angle (fig 2), making sure it is on the side of the BaByliss For Men logo (the front of the trimmer).
- For lengths beyond level 6, it is recommended to swivel the comb guide back again through 180° to the back of the Stubble Trim in order to maintain an effective cutting performance.
- Once you have selected the desired cutting length, switch the Stubble Trim on by sliding the power button to the on position. The blades will start to move.

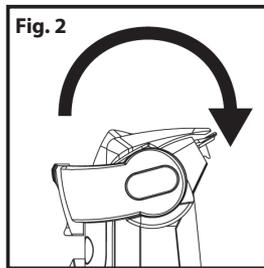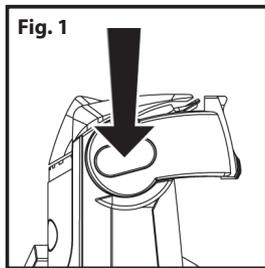


## Using the trimmer without the comb guide

If you are looking for an ultra close finish, you can use the trimmer without the comb guide. This will give you a very short cut and is ideal if you want to create a short 'shadow' look, or for detailing/shaping.

- To detach the comb guide, switch the trimmer off by sliding the power button. Then turn the rotary control anti-clockwise until you see the following symbol in the window of the rotary control.



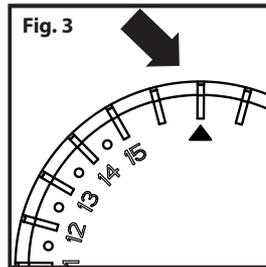

- Slowly pull the comb guide upwards and away from the trimmer body.  
Switch the Stubble Trim on by sliding the power button upwards.

**IMPORTANT:** please note when using the trimmer without the comb guide, the cutting length will be below 0.5mm.

(To re-attach the comb guide carry out the reverse of the comb guide removal instructions)

## TURNING IT ON AND USING IT

To adjust the cutting length of the trimmer, turn the dial. Switch the ON/OFF button. You can change the cutting length at any time.

**NOTE:** Make sure you hold the comb head flat against the skin. That is, the tips of the teeth and the little corners protruding from the comb should always be in contact with the skin. If not, the precision of the cut may change.





## Cutting performance


- Use on clean, dry hair.
- If possible, when using for the first time, try and grow your facial hair for at least 3 days before cutting. This will give you a better result, as your facial hair will feel thicker.
- Set the cutting length as required.
- It is always best to start cutting with a longer length first, then trim again if the length is longer than desired.
- Hold the Stubble Trim against the hair. Where possible try to hold the trimmer at 90° to the face for best results.
- Move the trimmer upwards through the hair, a little at a time, against the direction of hair growth.
- The Stubble Trim will work most effectively when cutting through the hair at its own speed – never force through the hair. You may experience a little resistance when trimming the moustache area, where hair is thicker and grows in many different directions.
- Never switch the trimmer off whilst in the hair.

## CLEANING AND MAINTENANCE

- Regular cleaning will maintain the high performance of your Stubble Trim.
- Switch the unit off.
- For maximum hygiene, the head of the trimmer can be washed in water. To rinse the trimmer head, remove the comb guide and the blade from the unit. These can then be run under water separately.  
**NOTE:** The trimmer unit is not waterproof and must not be rinsed under water. The comb guide can also be rinsed separately. Regular maintenance of the trimmer blades will keep them in optimal working condition.

### Removable blades

To make cleaning easier, the BaByliss for Men trimmer blades can be removed. Make sure the trimmer is turned off and then remove the comb guide. Hold the

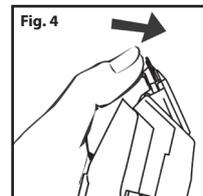



trimmer with the blades facing up and remove them by pressing on the tips of the blades (Fig. 4).

Carefully brush the blades using the cleaning brush to remove hair.

Do not use a sharp object to clean the trimmer blade



## **BATTERY DISPOSAL**

To minimise hazards to health and the environment at the end of this product's life, laws dealing with Waste Electrical and Electronic Equipment (WEEE) and The Waste Battery Directive require you to dispose of these products and their batteries at a suitable collection facility where they will be sent for appropriate recycling. Please contact your local authorities for more details on recycling and safe disposal of these in your area.

## **UK GUARANTEE**

This BaByliss For Men appliance is guaranteed for consumer use for 3 years. This guarantee covers defects under normal use from the date of purchase and ceases to be valid in the event of alteration or repairs by unauthorised persons. If the appliance does not perform satisfactorily due to defects in materials or manufacture, it will be repaired or replaced through Conair After Sales Service. The Conair Group Ltd reserves the right to amend terms and specifications without prior notice.

This guarantee in no way affects your statutory rights.





## **UK AFTER SALES SERVICE**

For further advice on using the appliance or should you need to return your product, please contact the Conair Customer Care Line on 03705 133191 (09:00 to 17:00 Monday to Friday) or email your enquiry to [ukinfo@conair.com](mailto:ukinfo@conair.com).

The return address is:

Customer Care Centre  
Conair Logistics  
Unit 4  
Revolution Park  
Buckshaw Avenue  
Buckshaw Village  
Chorley  
PR7 7DW

Please enclose your returns number, name and address details, together with a copy of proof of purchase and details of the fault.





IB-17/041

